

Apex 300

Portable Power Station

User Manual v2.0

Important Instructions

For optimal performance, update your unit to the latest firmware before first use.

See the appendix "Update Firmware via BLUETTI App" for guidance.

Read and understand this manual before use and keep it handy for future reference.





⚠ Tips

1. Fully charge the unit before first use.
2. Do not use solar panels with open circuit voltage higher than 60V. Solar input voltage range for the unit is 12V-60V.
3. If the unit's SoC falls below 5%, please recharge the unit in time. If the SoC drops to 0, power off the unit and charge it for at least 30 minutes before restarting.
4. If not used for more than 3 months, charge the unit to 40%-60% SoC and store it with the power off. For optimum battery life, discharge and charge the unit every 3 months. It's recommended to charge via an AC source; if using solar energy, ensure an input of over 100W.

Legal Information

Copyright © Shenzhen PowerOak Newener Co., Ltd. All Rights Reserved.

No reproduction or transmission of any part of this document is permitted without the prior written consent of Shenzhen PowerOak Newener Co., Ltd.

Notice

BLUETTI's products and services are subject to the terms and conditions agreed upon during purchase. Some aspects described in this manual may not be available under your purchase contract. Unless otherwise specified in the contract, BLUETTI makes no express or implied representations or warranties regarding the contents of this manual.

The contents of this manual are subject to change without notice. Please obtain the latest version from BLUETTI official website.

If you have any questions or concerns about this manual, please contact BLUETTI support for further assistance.

Shenzhen PowerOak Newener Co., Ltd.

F19, BLD No.1, Kaidaer, Tongsha RD No.168, Xili street, Nanshan, Shenzhen, China

Website: <https://www.bluettipower.com/>

Contents

1	Safety Information	05
2	What's in the Box	08
3	Get to Know Your Apex 300	09
3.1	Apex 300 Overview	09
3.2	LCD Display	10
4	Use Your Apex 300	11
4.1	Power On/Off	11
4.2	Charging Options	12
4.3	Power Your Devices	15
5	Configure Your Apex 300	16
5.1	Setting Mode	16
5.2	AC Charging Mode	17
5.3	Power Lifting Mode	17
5.4	ECO Mode	17
6	Viewing Device Information	18
7	UPS Feature	18
8	Grid Self-Adaption Mode	20
9	Connecting Expansion Battery	21
10	Operating in Parallel	22
11	Adjust Grid Input Current	23
12	Maintenance and Care	24
13	Specifications	25
14	Troubleshooting & FAQs	26
	Appendix	27

1. Safety Information

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

WARNING - When using the product, basic precautions should always be followed, including the following:

- Read all the instructions before using the product.
- Handle the product with care, avoiding drops, violent impacts, or tilting.
- To reduce the risk of injury, close supervision is necessary when the product is used near children.
- Do not put fingers or foreign objects into the product's ports.
- Use of an attachment not recommended or sold by the manufacturer may result in a risk of fire, electric shock, or injury to persons.
- Do not move the product during operation to avoid poor connections.
- Do not expose the battery to high temperatures, as this may cause an explosion or leakage of flammable liquids or gases.
- Do not use the product in the rain or high humidity environments.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
- Handle the product with caution in low air pressure environments to prevent explosions or leaks.
- Charge the product in a well-ventilated area.
- Under abusive conditions, liquid may be ejected from the product's battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Battery liquid may cause irritation or burns.
- In case of fire, use a dry powder fire extinguisher appropriate for the product.
- Never dispose of the product's battery in fire, hot ovens, or by cutting it.
- Do not operate the product with a damaged cord, plug, or output cable.
- To reduce the risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the product.
- Do not disassemble the product; take it to a qualified service person if service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.
- Unplug the product before any servicing to reduce the risk of electric shock.
- Power off the unit before unplugging.

- **WARNING - RISK OF EXPLOSIVE GASES.** Follow these instructions and those published by manufacturer of any equipment you intend to use in vicinity of the product to reduce risk of battery explosion.
- **WARNING - RISK OF ELECTRIC SHOCK.** Never use the product to power tools to cut or access live parts, wirings, or materials containing them, such as building walls.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.



The symbols on the unit and its accessories are intended to remind you to read the instructions in the literature accompanying the product before operation and maintenance.

- The socket-outlet should be installed near the product and easily accessible for safety purposes.
- When charging with lead-acid batteries or using the product to charge them, follow these safety precautions:
 - a. Wear complete eye and clothing protection; do not touch eyes when working near a battery.
 - b. No smoking, sparks, or flames near the battery or engine.
 - c. Avoid dropping metal tools onto the battery to prevent sparks or short circuits.
- Power off the unit before unplugging.
- Please install a 50A, single-pole, 230V AC overcurrent protection device in accordance with European standards to prevent severe electrical hazards.

Disposal and Recycling

1. Take old electronic components and batteries to designated recycling centers. This prevents improper disposal and supports material recovery.
2. If possible, fully discharge the batteries and then place them in designated battery recycling boxes. The batteries in this product contain hazardous chemicals. Do not dispose of them with regular household waste. Please follow local laws and regulations for proper battery disposal.
3. If a battery cannot fully discharge due to product malfunction, do not place it in the battery recycling box. Instead, contact a professional battery recycling organization for safe handling.

Grounding Instructions (For AC charging only)


- This product must be grounded when connected to the grid. If this product should malfunction, grounding provides a path of least resistance for electric current to reduce the risk of electric shock.
- The product is equipped with an AC charging cable having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- **WARNING** - Improper connection of the grounding conductor can result in a risk of electric shock. Check with a qualified electrician if you're in doubt as to whether the product is properly grounded. Don't modify the plug provided with the product—if it'll not fit the outlet, have a proper outlet installed by a qualified electrician.

SAVE THESE INSTRUCTIONS


2. What's in the Box



 Apex 300
Portable Power Station



AC Charging Cable
(150cm / 4.92ft)

 

Car Charging Cable
(Cig lighter - XT60, 73.5cm / 2.41ft)




Grounding Screw
(M5*10)



User Manual & Warranty Card

3. Get to Know Your Apex 300


3.1 Apex 300 Overview

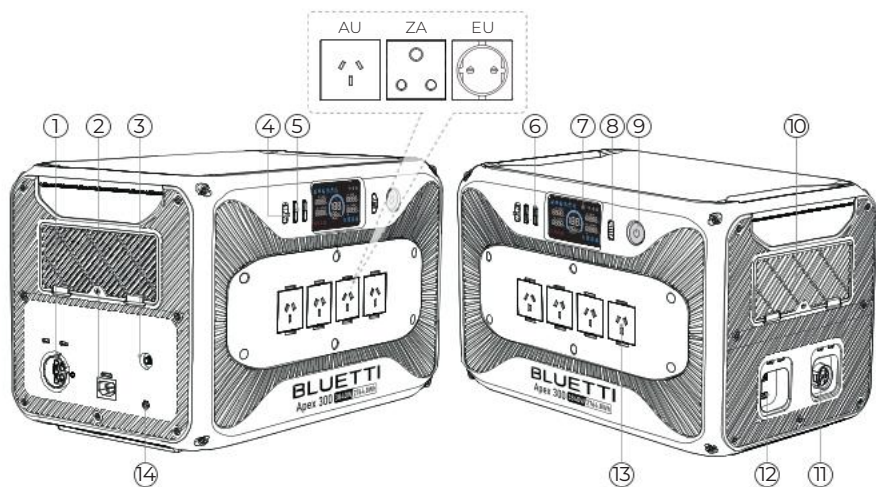

- ① 50A AC Input/Output (P050A)
- ② 15A AC Input
- ③ Circuit Breaker
- ④ Magic Button
- ⑤ ECO Mode Button
- ⑥ AC Power Button
- ⑦ LCD Display
- ⑧ Charging Mode Selector
- ⑨ Power Button
- ⑩ Removable Dust Filter
- ⑪ Battery Expansion Port
- ⑫ DC Input
- ⑬ AC Outlet
(EU 16A Max./UK 13A Max./AU 10A Max.)
- ⑭ Grounding Terminal*

* Used for grounding when powering certain appliances. For assistance, contact us or seek guidance from the appendix "Grounding Guidelines (Minimum cross-sectional area: 8AWG)".

3.2 LCD Display

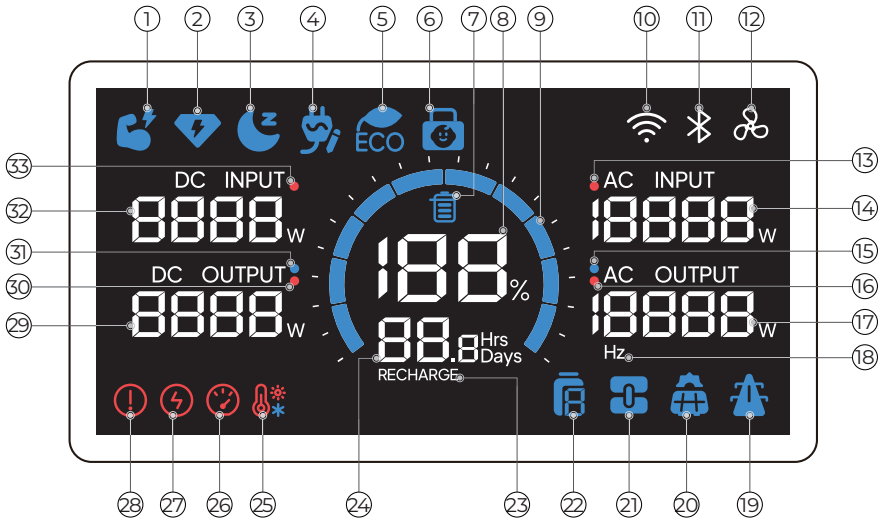

- | | | |
|----------------------------|------------------------|--------------------|
| ① Power Lifting Mode | ⑫ Fan* | ⑳ Charge Reminder* |
| ② Turbo Charging | ⑬ AC Input Alarm | ㉑ Remaining Time* |
| ③ Silent Charging | ⑭ AC Input Power | ㉒ High/Low Temp |
| ④ AC Output Restore* | ⑮ AC Output* | ㉓ Overload |
| ⑤ ECO Mode | ⑯ AC Output Alarm | ㉔ Overcurrent |
| ⑥ Child Lock | ⑰ AC Output Power | ㉕ System Fault |
| ⑦ Charge/Discharge Limits* | ⑱ AC Output Frequency | ㉖ DC Output Power |
| ⑧ State of Charge (SoC) | ㉑ AC Input* | ㉗ DC Output Alarm |
| ⑨ Progress Bar* | ㉒ DC Input* | ㉘ DC Output* |
| ⑩ WiFi | ㉓ Parallel Connection | ㉙ DC Input Power |
| ⑪ Bluetooth | ㉔ Expansion Batteries* | ㉚ DC Input Alarm |

* AC Output Restore: When the battery is depleted or reaches the SoC low value which causes the unit to shut down, the AC output status will be saved and automatically restored once connected to grid power.

Charge/Discharge Limits: Charging or discharging stops when the set limit is reached.
Progress Bar: Indicates charging progress (fills up during charging or pass-through charging, depletes during discharging).

* Fan: Flashes when the fan is malfunctioning.

DC/AC Output: Indicates active output.

AC Input: Shows Apex 300 charges via wall outlet or generator.

DC Input: Shows Apex 300 charges via solar panels, cars, or lead-acid batteries.


Expansion Batteries: Displays the number of connected expansion batteries.

Charge Reminder: SoC below 5%. Charge the unit in time.

Remaining Time: Shows the time remaining for charging or discharging.

4. Use Your Apex 300

4.1 Power On/Off

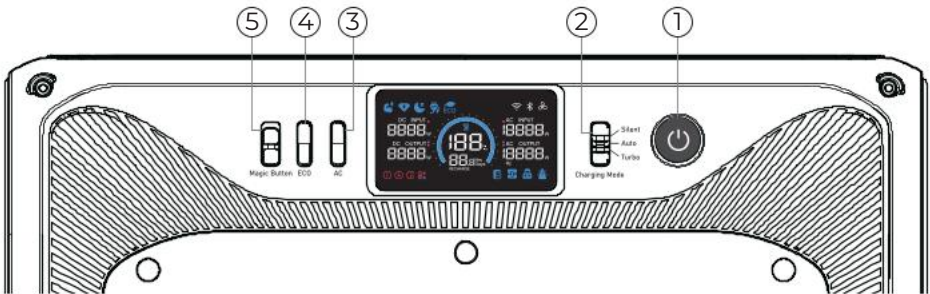

① Power On

Press the power button; the lit button indicates that the Apex 300 is on standby.

Power Off

Long press the power button for about 2 seconds to turn off the unit.

② Charging Mode Selector

Silent	Auto (Standard)	Turbo

③ AC Output On/Off

Press the AC power button to turn on when Apex 300 is on. Press again to turn it off.

④ ECO Mode On/Off

Press the ECO mode button to turn on when Apex 300 is on. Press again to turn it off.

⑤ Magic Button

Functions can be customized and set via APP.


Notes:

- To set the charging mode via the app, select "Auto" charging mode.
- When connected in parallel, set all units to "Auto" for the app to control the charging mode.
- When Apex 300 is on, press any button to activate the LCD display.

4.2 Charging Options

4.2.1 Wall Outlet


Plug the Apex 300 into a standard wall outlet. The charging stops once it's fully charged.

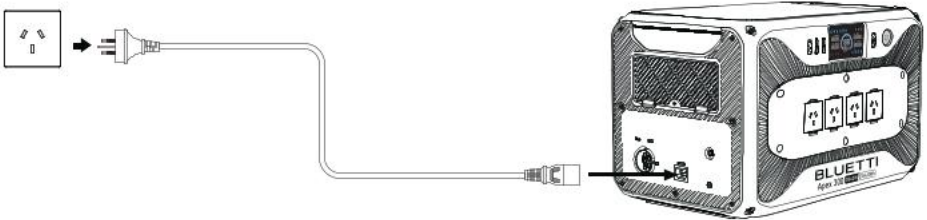

Note: Default 10A, you can enter the advanced mode to set the current, European standard, Australian standard maximum 15A, British standard maximum 13A.

4.2.2 Lead-acid Battery

Connect the Apex 300 to a lead-acid battery using the optional lead-acid battery charging cable. Ensure the red cable is connected to the positive terminal and black to the negative. The maximum charging current is 20A (Use a 24V lead-acid battery and set to PV Pro mode.).

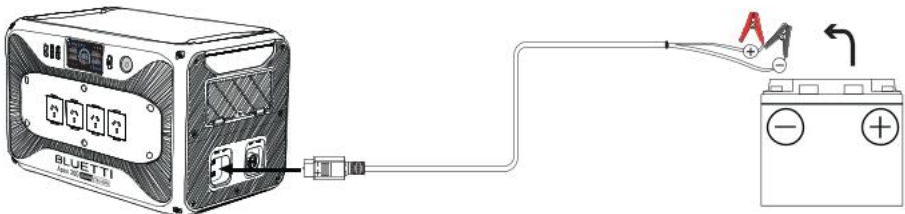


4.2.3 Solar Panel

Connect your solar panel(s) to the Apex 300 with the solar charging cable (sold separately).

Note: Make sure your solar panel(s) meet the following requirements:

Voc: 12V-60V Current: 20A Max. Power: 1,200W Max.

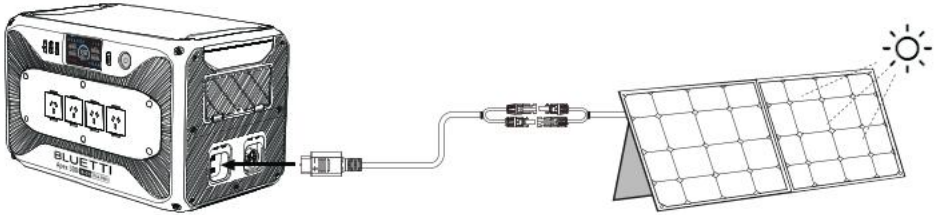

In the App, set the DC input source to "PV" or "Other" in the advanced mode.

DC Input Source	Non-Advanced Mode Settings	Advanced Mode Settings
PV	$12V \leq U^* \leq 30V, I^* \leq 8.2A$ $30V < U \leq 60V, I \leq 20A$	$12V \leq U \leq 16V, I \leq 8.2A$ $16V < U \leq 60V, I \leq 20A$


* U: Solar input voltage; I: Input current

4.2.4 Generator

Connect the Apex 300 to a gasoline, propane, or diesel generator using the AC charging cable. The charging stops automatically when fully charged.


Notes:

- Make sure the generator delivers a pure sine wave output with matching voltage and frequency.
- Ensure the generator's output power exceeds the Apex 300's charging requirements.
- It's recommended to enable the Grid Self-Adaption mode when charging the Apex 300 with a generator.

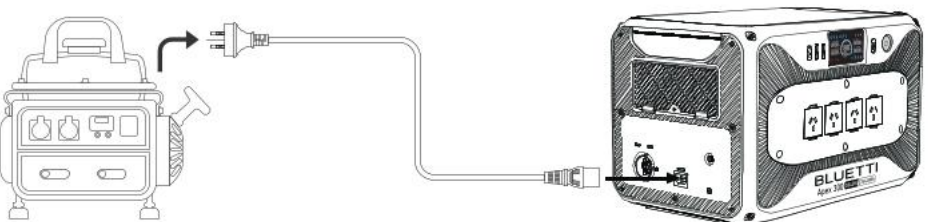


4.2.5 Car

Connect the Apex 300 to your car's 12V or 24V cigarette lighter port using the car charging cable. It charges at up to 96W with a 12V port and 192W with a 24V port, automatically stopping when fully charged.

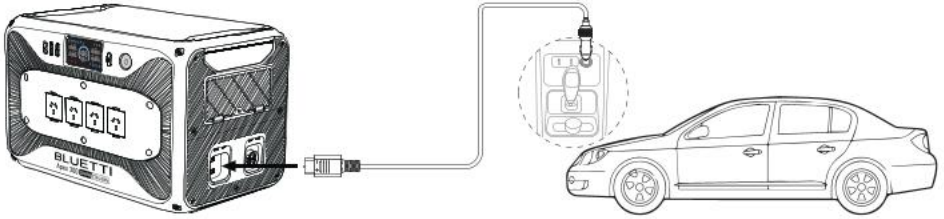


For faster charging, you can use the optional BLUETTI Charger 1. For details, refer to *CHARGER 1 DC-DC Charger User Manual*.

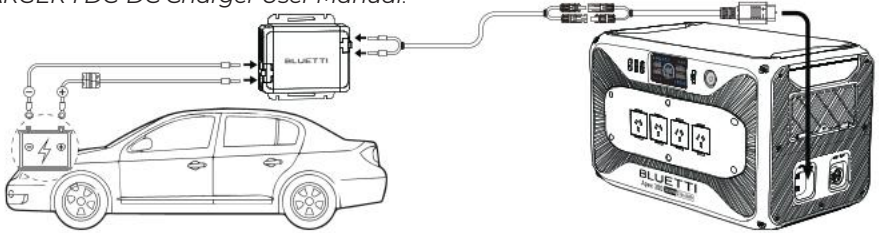

Note: Make sure your car has power and the engine is running while charging to prevent over-discharging the car battery.

4.2.6 EV Charging Station

Connect the Apex 300 to an EV charging station using the optional EV charging cable (sold separately).

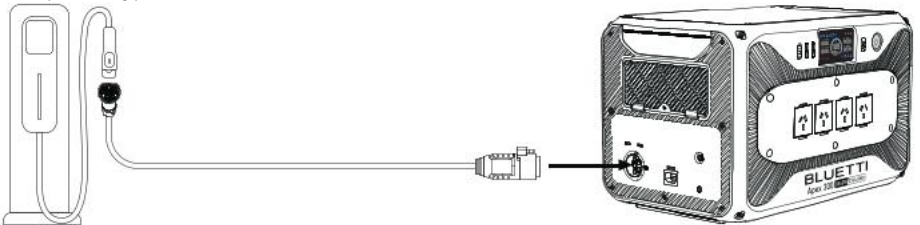


Notes:

- Make sure the EV charging station delivers a pure sine wave output with matching voltage and frequency.
- Ensure the EV charging station's output power exceeds the Apex 300's charging requirements.
- It's recommended to enable the Charging Station in the app's Advanced Settings.


4.3 Power Your Devices

AC Output

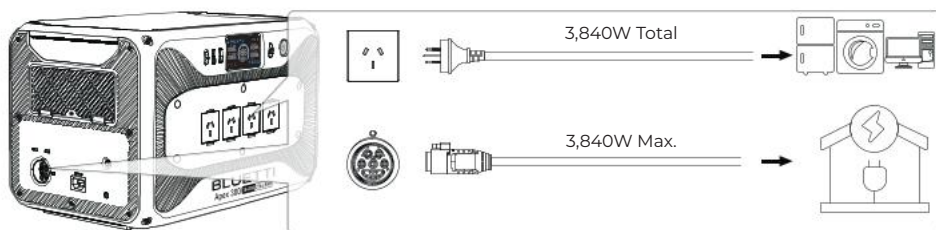

Note: When servicing the devices connected to the unit, remember to unplug them from the outlets. Even if the AC output is turned off, physically unplugging the devices is necessary for complete disconnection.

DC Output

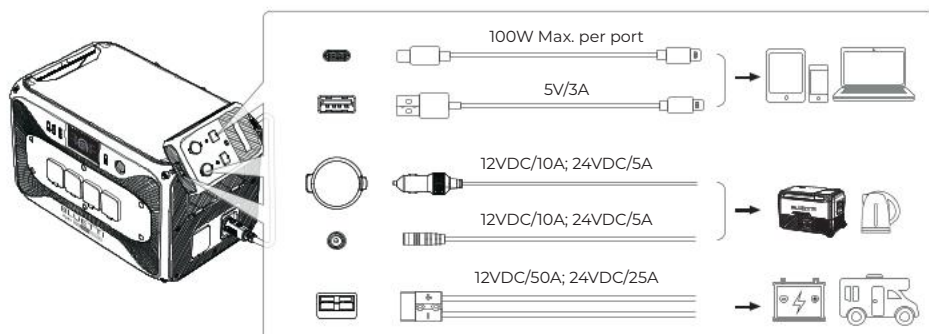


Note: A Hub D1 is required. For details, please refer to the *Hub D1 DC Power Hub User Manual*.

5. Configure Your Apex 300

Use the buttons on the unit or the app to switch frequencies, toggle WiFi and Bluetooth, and activate modes like Power Lifting, Turbo and Silent Charging, and ECO. For advanced settings and features - such as Grid Self-Adaption mode, UPS mode, adjusting maximum grid input current, and detailed ECO mode settings - use the BLUETTI app. Refer to the app manual for more details.

5.1 Settings Mode


Enter the Mode: Press and hold the AC power and ECO mode buttons simultaneously for about 2 seconds. The frequency icon flashes.

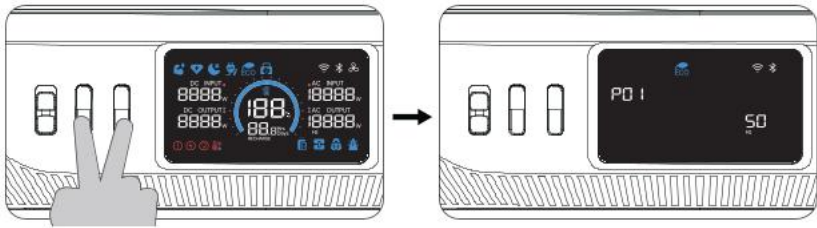

Exit the Mode: Press and hold both the AC power and ECO mode buttons again. If left idle for 1 minute, the Apex 300 automatically exits without saving any changes.

Adjust settings in Settings Mode.

- Turn off AC output before setting the frequency.
- Press the ECO mode button to navigate through the items, and press the AC power button to adjust.

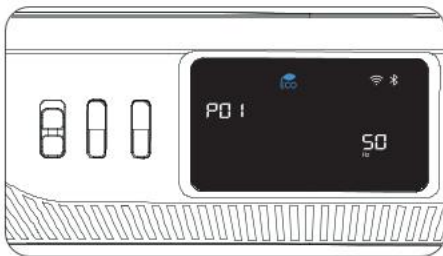

Page Code	Setting
P01	Frequency
P03	Charging Mode
P04	Power Lifting Mode
P05	ECO Mode
P06	Bluetooth
P07	WiFi
P08	Child Lock

5.2 AC Charging Mode

The Apex 300 offers three charging modes: Standards, Turbo, and Silent. By default, the unit charges in Standard mode.

Mode	AC Input	Solar Input	AC + Solar Input	Note
Standard	1,440W Max.	1,440W Max.	1,440W Max.	Battery-friendly
Turbo	3,840W Max.	2,400W Max.	3,840W Max.	Quick recharge
Silent	500W Max.	500W Max.	500W Max.	Quiet and low-power operation

Note: The data above is for reference only.

5.3 Power Lifting Mode

Power Lifting Mode is disabled by default. It allows Apex 300 to power up to 7,680W pure resistive loads like kettles, electric blankets, hairdryers, and similar heating devices.

Notes:

- This mode is only for pure resistive loads rated 3,840W-7,680W.
- In this mode, the actual operating power of the connected device will be lower than its rated power.

5.4 ECO Mode

AC-ECO and DC-ECO modes are enabled by default. The Apex 300 shuts off the AC or DC output after a period of low (default 4 hours with 10W for AC, 5W for DC) or no load.


Notes:

- AC-ECO Mode is not available when charging with AC power.
- Press the ECO mode button to turn on/off AC-ECO and DC-ECO modes together, and use the BLUETTI app to control them separately.
- Disable the ECO mode when connecting small devices under 60W or critical appliances such as lights and refrigerators.

6. View Device Information

View device information in Settings Mode, too.


- Go to the P01 frequency page and long press the ECO mode button to view the unit's SN.
- To navigate through the settings, press and hold the ECO mode button again for about 2 seconds.
- When on Fault History page, long press the AC power button for about 2 seconds, then release to clear the history.

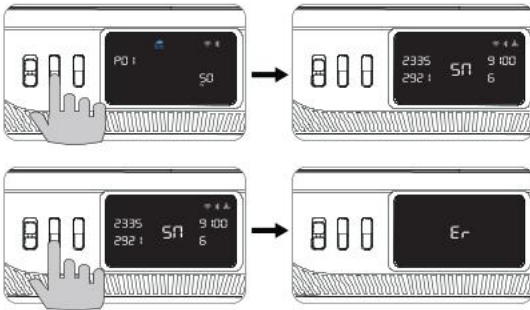

Page Code	Information
SN	Serial Number (SN)
Er	Error Code
HI	Fault History
UE	Version


7. UPS Feature

Connect Apex 300 to the wall, and it directly draws power from the outlet to operate connected devices. It switches to battery power instantly (20ms) during an outage when connected to specific outlets. Set UPS modes in the app.

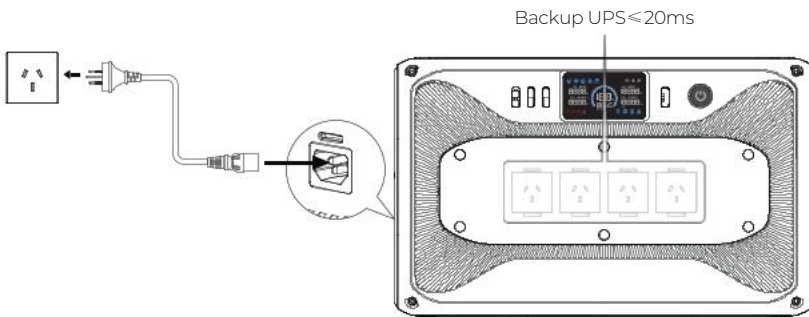


• Backup

Apex 300 charges using available solar and grid power, with a priority on solar.

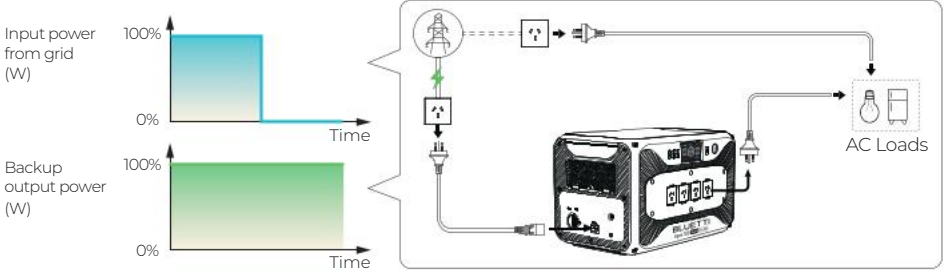

• Time of Use


Save costs by scheduling Apex 300 to charge during off-peak hours and power devices during peak hours.

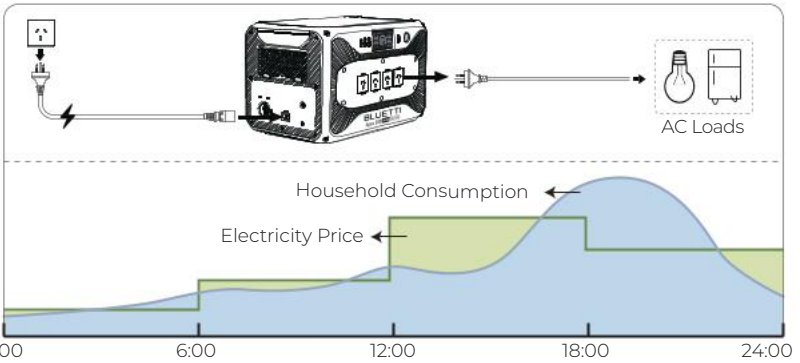

Period	Charge	Discharge	Discharge	Discharge
Load Power	Grid	Apex 300 + PV	Apex 300 + PV	Apex 300


• Self-consumption

Efficiently uses solar energy. Apex 300 initially charges from the grid to a set SoC and seamlessly switches to solar replenishment.

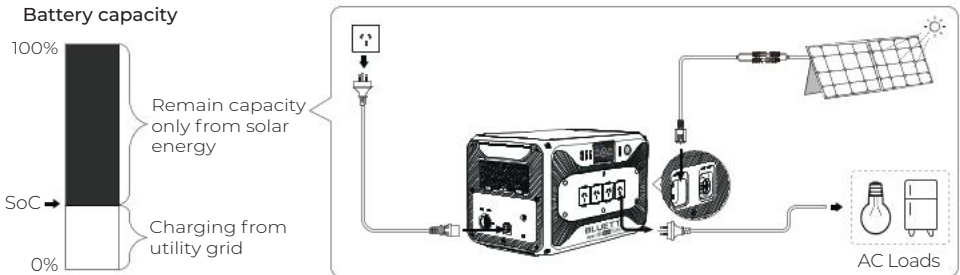

• Custom

Personalize charging/discharging schedule, set battery SoC limits, and control the schedule and grid input switches.

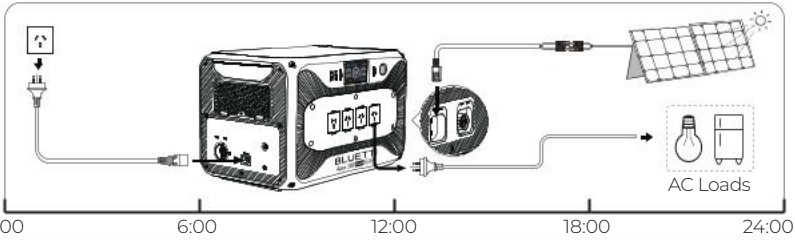


Period	Charge	Discharge	Discharge	Discharge
Load Power	Grid	Apex 300	Apex 300	Apex 300

Attention: Not for devices like data servers or workstations that require high-performance UPS. BLUETTI assumes no liability for issues arising from violating this restriction.

8. Grid Self-Adaption Mode

When charging with an unstable generator or grid power, or if consumption power exceeds charging power, enable this mode in the app. The Apex 300 automatically adjusts to handle power fluctuations, protecting the unit and connected devices from potential issues due to variations in power quality.

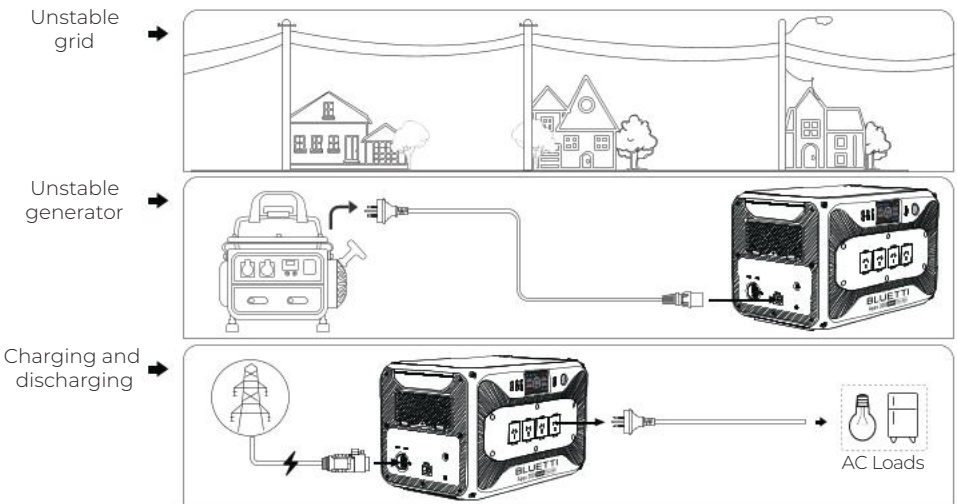

9. Connect Expansion Battery

Use the battery expansion cables to connect to up to 6 B300K batteries for a maximum capacity of 19,353.6Wh.



Apex 300 + 1*B300K




Apex 300 + 2*B300K




Apex 300 + 3*B300K



Apex 300 + 4*B300K

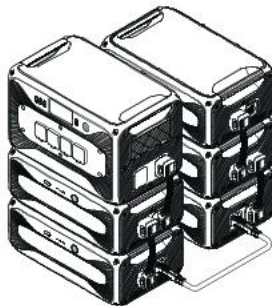

Apex 300 + 5*B300K

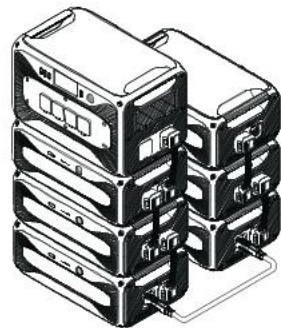

Apex 300 + 6*B300K

Notes:


- Power off all units before connecting.
- Power on the Apex 300, and the battery activates automatically. Stacking the units is recommended.
- When connecting two or more B300K batteries, it's recommended to securely mount the units to the wall using metal brackets and screws.
- The Apex 300 is compatible with both B300 and B300S battery packs, but mixing them is not recommended.
- Both ends of all battery cables must be locked for normal charging and discharging.
- The P090D cable needs to be purchased separately.

10. Parallel Connection

To increase your power output, you can connect two or three Apex 300 units in parallel using the Hub AI parallel box. For details, refer to the *Hub AI User Manual*.


Connecting Two Apex 300 Units

This setup provides up to 7,680W of power and 38,707.2Wh of capacity with 12 B300K batteries.

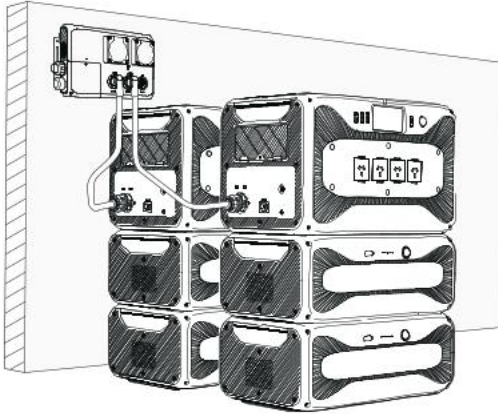

Connecting Three Apex 300 Units

This setup provides up to 11,520W of power and 58,060.8Wh of capacity with 18 B300K batteries.

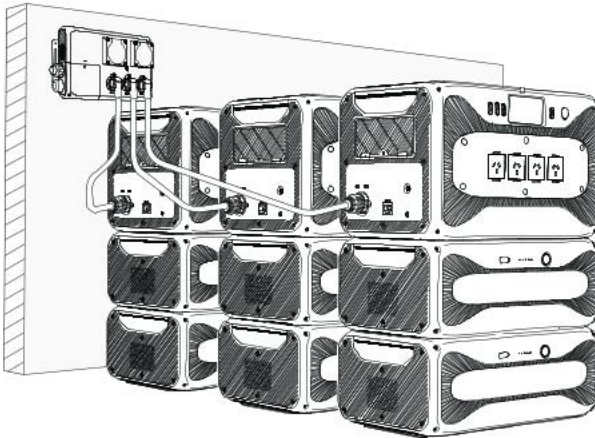

Notes:

- Make sure all Apex 300 units are powered off before connecting.
- Power on one Apex 300 unit to automatically turn on the others.
- Settings from one unit will sync with all connected units.


Disconnecting the System

To disconnect the parallel system, follow these steps:

Step 1: Press and hold the AC power button on one Apex 300 unit until both AC input and output power display "OFF" on the screen.

Step 2: Disconnect its parallel cable from Hub A1.


Step 3: Close the cover of the Hub A1's unused outlet.

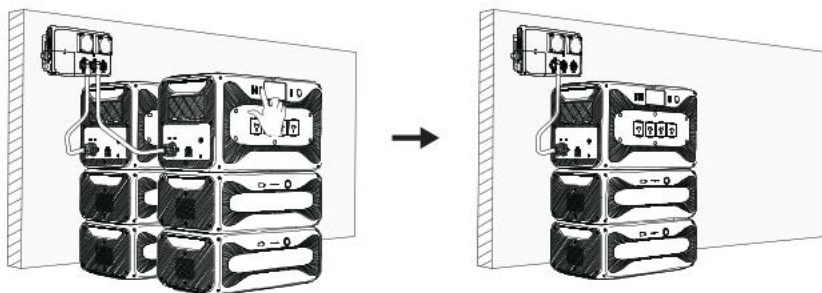

Attention: Follow proper steps when connecting or disconnecting devices. BLUETTI is not responsible for any issues caused by unauthorized actions.

11. Adjust Grid Input Current

The default current is 10A, you can enter the advanced mode to set the grid input current to 15A, (European Standard, Australian Standard maximum 15A, British Standard maximum 13A).

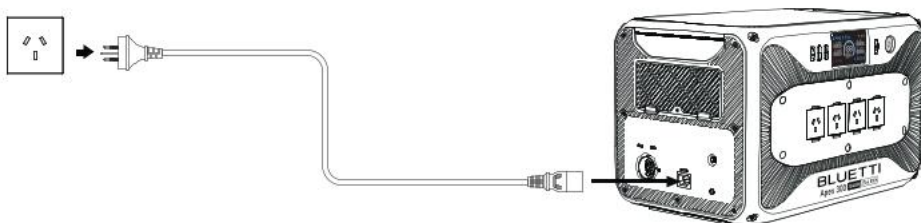

* For adjustments exceeding 15A, please contact BLUETTI support for assistance. It is also recommended that you consult an electrician to verify that your household circuitry is capable of carrying the set current and that you have purchased the special charging cable supplied by BLUETTI.

Note: Australian regulations if you need greater than 10A charging, you need to buy 15A fast charging cable separately on the official website.

12.Maintenance and Care

- If the unit's SoC falls below 5%, please recharge the unit in time.
- Before storing, charge to 40%-60% SoC, then power off and disconnect all cables.
- Store it in a cool, dry place, away from flammable materials.
- Safe storage temperature: -10°C to 40°C (14°F to 104°F). For storage over a month, keep it below 35°C (95°F).
- Fully cycle every 3 months to maintain battery health.
- Avoid extended storage; it may impact performance and lifespan.

If SoC drops to 0 during storage or startup:

- Shut down immediately.
- Charge within 48 hours.
- Keep it at 5°C to 35°C (41°F to 95°F) for 6 hours before charging.
- Recommended to charge via an AC source; if using solar energy, ensure an input of over 100W.

13. Specifications

Model	Apex 300
Battery Capacity	2,764.8Wh (51.2V/54Ah)
Battery Type	LiFePO ₄
Weight	About 38kg (83.78lbs)
Dimensions (L × W × H)	525 × 327 × 320mm (20.67 × 12.87 × 12.6in)
Charging Temperature	0°C to 40°C (32°F to 104°F)
Discharging Temperature	-20°C to 40°C (-4°F to 104°F)
Storage Temperature	-20°C to 40°C (-4°F to 104°F)
Working Humidity	10% to 90%
IP Rating	IP20
AC Output	
AC socket ports	3,840W Max. in total, 230V, 16.7A Max., 50/60Hz, (EU: 16A Max. each port, UK: 13A Max. each port, AU: 10A Max. each port)
1 × 50A AC Input/Output (P050A)	3,840W Max., 230V, 16.7A Max., 50Hz / 60Hz
AC Input	
15A AC Input	3,450 Max., 230V, 50Hz / 60Hz, 15A Max.
50A AC Input/Output (P050A)	230V, 50A Max. (Charging + Bypass)
AC Charging (Requires Hub A1)	3,840W Max. (80% in 45 mins @15°C to 25°C / 59°F to 77°F)
DC Input (2 × XT60PM-M)	1,200W Max. per port, 12V-60V, 20A Max.
AC + DC Charging	Apex 300: 3840W Max Apex 300+1~6 B300K: 6240W Max
Battery Expansion Port	
Nominal Voltage	51.2VDC, 90A Max.
Parallel Port	
Interface	P050A
Output Current	50A Max.

14. Troubleshooting & FAQs

Error Code	Description	Solutions
E001	Inverter overload	<ul style="list-style-type: none">• Check device power usage.• Reduce load if too high.
E002	Inverter overtemperature protection, AC output off	<ul style="list-style-type: none">• Wait 10 mins for the unit to cool down.• Turn on the AC output again.
E003	Inverter short circuit	<ul style="list-style-type: none">• Check devices for short circuits.• Disconnect and fix.
E033	PV overvoltage	<ul style="list-style-type: none">• Make sure the PV input voltage is within 12V-60V.
E039	PV overtemperature	<ul style="list-style-type: none">• Wait 10 mins for the unit to cool down.• Re-enable the PV input.
E085	Charging temperature too high	<ul style="list-style-type: none">• Wait for the unit to cool down before using it again.
E086	Charging temperature too low	<ul style="list-style-type: none">• Place the unit in an ambient temperature range of 0°C to 40°C (32°F to 104°F).
E087	Discharging temperature too high	<ul style="list-style-type: none">• Wait for the unit to cool down before using it again.
E088	Discharging temperature too low	<ul style="list-style-type: none">• Place the unit in an ambient temperature range of -20°C to 40°C (-4°F to 104°F).
E115	Grid overfrequency	<ul style="list-style-type: none">• Verify home grid frequency.• Contact utility company if necessary.
E116	Grid underfrequency	<ul style="list-style-type: none">• Verify home grid frequency.• Contact utility company if necessary.
Others	/	<ul style="list-style-type: none">• Contact BLUETTI support for assistance.

FAQs (Frequently Asked Questions)

Q1: How do I know whether my devices will work with this product?

A: Keep the total AC power below 3,840W. Some devices with motors or compressors may start at 2-4 times their rated power, which could easily overload the Apex 300.

Q2: Can I use third-party solar panels to charge this product?

A: Yes, you can use third-party solar panels with open circuit voltage of 12V-60V and MC4 connectors. Avoid mixing different types of solar panels.

Q3: Can it charge and discharge at the same time?

A: Yes, the Apex 300 supports pass-through charging.

Q4: Why is the charging power often too low?

A: The built-in BMS adjusts the charging power based on battery temperature and SoC to protect the battery and extend its life.

Q5: How to calculate the operation time?

A: Operation time = Battery Capacity × DoD × η ÷ (Load + Apex 300's Self-consumption)

Note: DoD (Depth of Discharge) is 95%. η (inverter efficiency) is over 90%. The Apex 300 self-consumption is about 20W.

Q6: Why does a warning come up when using a diesel heating pump with the cigarette lighter port?

A: The pump may require more initial power to start. Use a compatible adapter to start and run the pump with our AC outlets.

Appendix

Update Firmware via BLUETTI App

Keeping firmware updated is IMPORTANT for optimal performance. For detailed instructions, refer to the app user manual in the app. Using the Elite 200 V2 upgrade as an example.


1. Download the BLUETTI app

Scan the QR code or search for "BLUETTI" in the App Store or Google Play to download the app.




2. Log in or sign up

Log in with a BLUETTI account. If there is no account, create one by following the on-screen instructions.

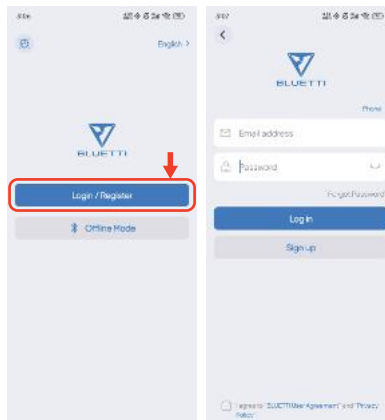


3. Bind the unit

- Tap Add Device directly or access My Devices > Add Device to start the process.
- Select the unit from the available device list, or choose Add Manually and enter the unit's serial number (SN).
- Alternatively, tap Scan on the Home page or in Add Device page to bind via QR code.

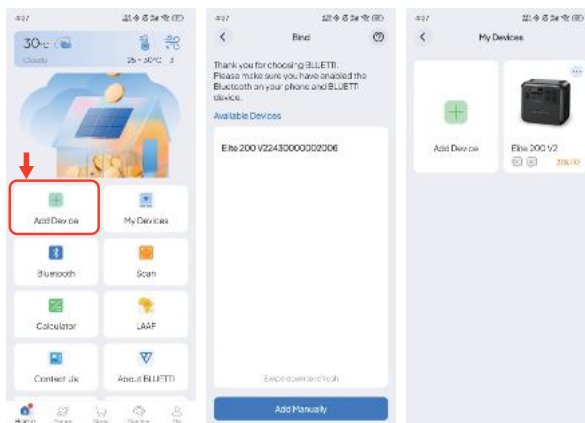

4. Connect via Bluetooth


On the My Devices page, tap the unit and select Bluetooth as the connection method.

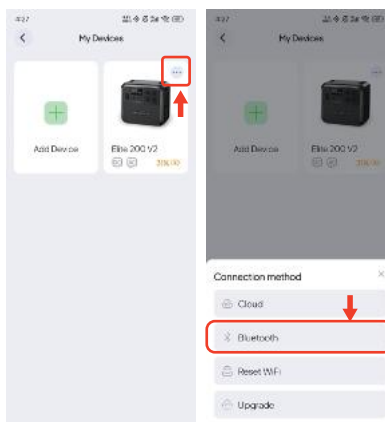

5. Check for Firmware Updates

Tap Upgrade to access the Upgrade page.

The app will check for the latest firmware version available for the unit.

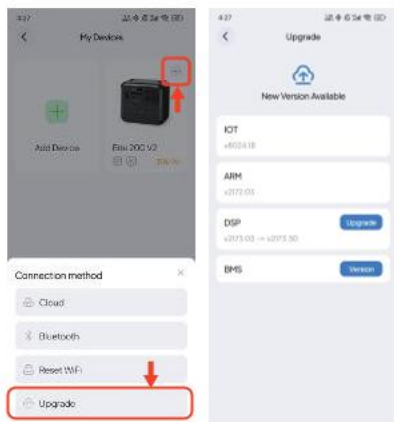

6. Download and Install the Update

If a new firmware update is available, tap


Upgrade and follow the on-screen instructions.

Note:


- Ensure the unit remains powered on and connected during the update.
- Keep your phone and the unit close together (recommended range: 16.4ft / 5m).
- Do not exit app until done.

Grounding Guidelines

Only use the grounding terminal when the product is connected to the home grid using a 2-pin cable, or if the wall outlet's grounding is ineffective, and the connected device features a metal case.

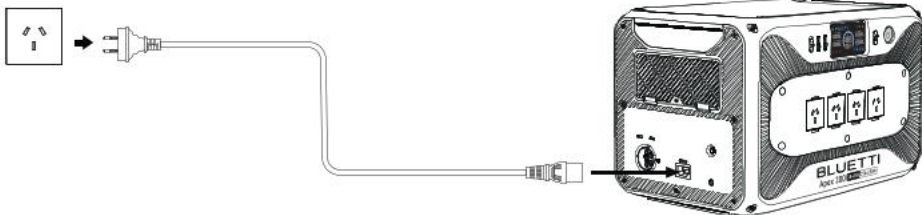

Use a cable with OT terminals for grounding. Connect one end to the grounding terminal with a grounding screw and the other end to the wall outlet or home distribution box ground.

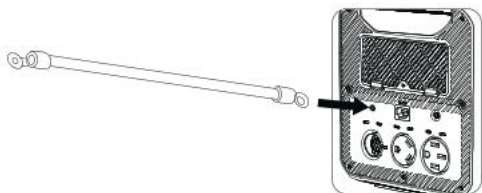

Need Help? We're here for you!

Customer Service(AU)

Email: sale-au@bluettipower.com

Address: Unit 15, 25 Gibbes Street Chatswood NSW 2067

Customer Service(ZA)

Email: sale-za@bluettipower.com



 
@ BLUETTI Official



@ bluetti_australia



@ bluetti.au



@bluetti.inc

Visit Us

SHENZHEN POWEROAK NEWENER CO., LTD.

Address: F19, BLD No.1, Kaidaer, Tongsha Rd No.168, Xili Street,
Nanshan, Shenzhen, China



BLUETTI



Certificate

Inspector: _____

QC: _____

Just Power On

P/N: 17.0303.0869-01A1